

STEP 4

Attach Panel (E) and Panel (D) to assembled part, turn right Mini Fit (1A), then lock with (1B).

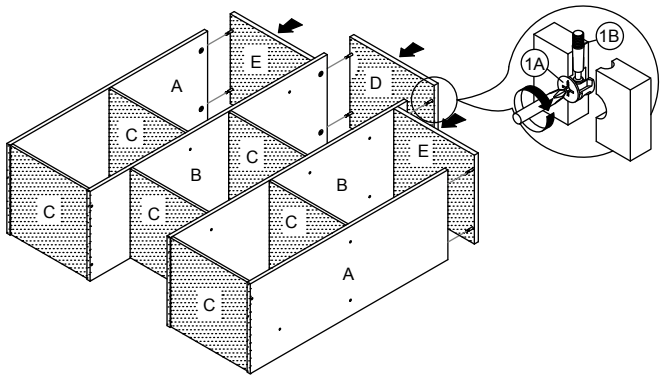


STEP 5

Secure Panel (E) to Panel (B) by attaching Screw (2).

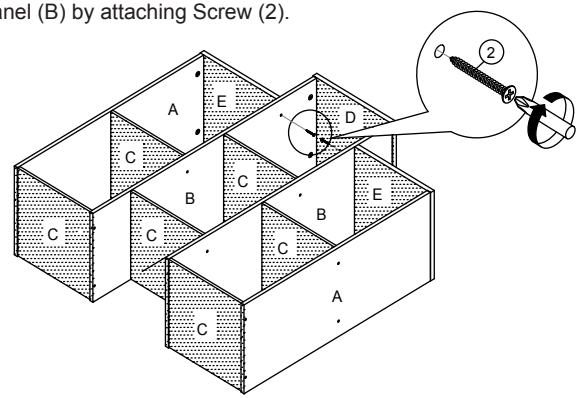

Recommended Maximum Weight

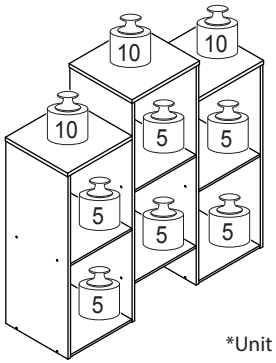

*Unit in Pound(lbs)

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

>Put heavier items on lower shelves.


Furinno®

Fits Space. Fits Budget

Assembly Instruction

Furinno Parsons Staggered Cube Bookcase with 6-Shelves

MODEL : **12221**

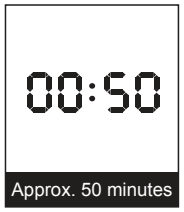


Approx. 50 minutes



Recomm. 1 Person



Tool Required

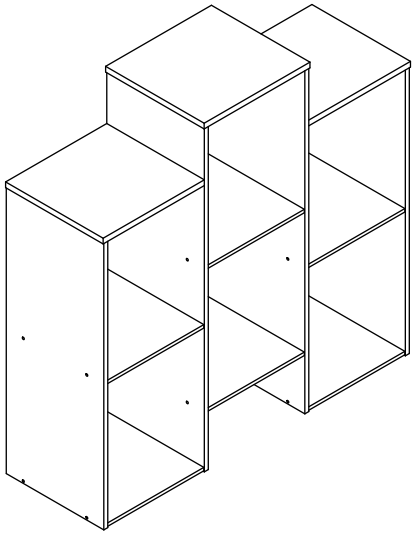


Customer Support


NEED HELP? For replacement requests or product inquiries, please contact our Customer Service Team by emailing us at **support@furinno.com**. Thank you for selecting Furinno!

www.furinno.com

1222120181017

No	Hardware List	Qty
1	Mini Fit 	8sets
2	C/B Screw 	28pcs

No	Parts List	Qty
A	Side Panel	2pcs
B	Center Side Panel	2pcs
C	Shelf Panel	6pcs
D	Center Top Panel	1pc
E	Side Top Panel	2pcs

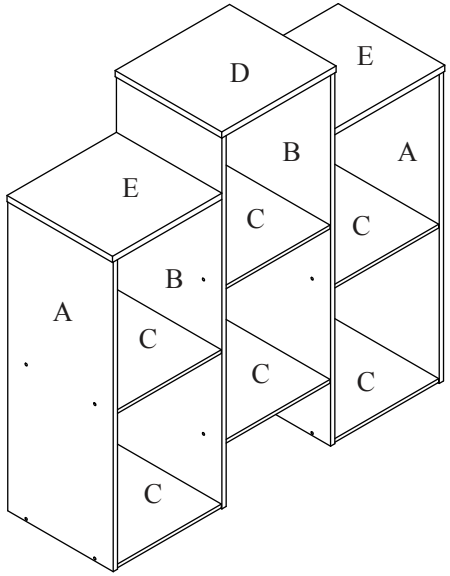


USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using uncompatible hardware might cause damage to product.


STEP 1

Install Mini Fit (1B) to Panel (E) and (D).

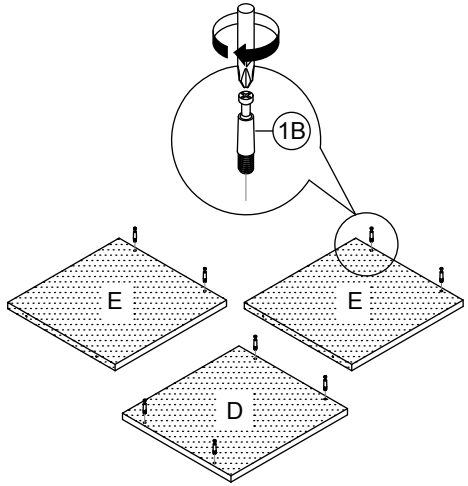

STEP 2

Install Mini Fit (1A) to Panel (A) and (B).

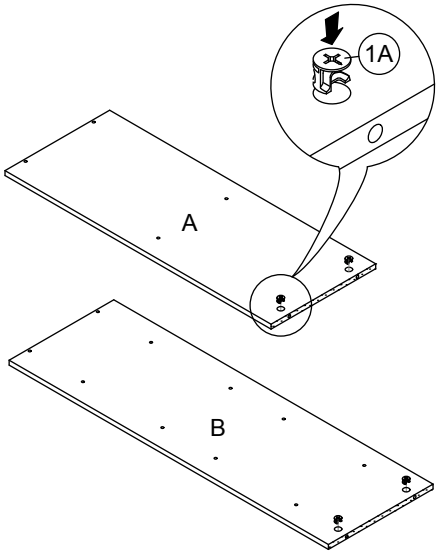

STEP 3

Attach Panel (C) to Panel (A) and (B) with Screw (2).

