

STEP 4

Attach another two Panel (E) to assembled unit in Step 3 using Self-Tapping Screw (1), as shown.

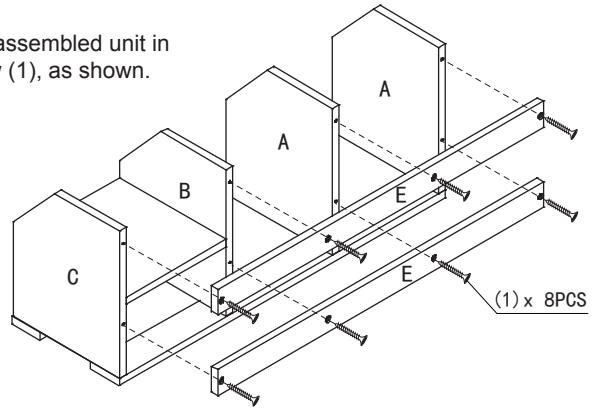


STEP 5

Insert assembled drawer in Step 1 to the unit, as shown.

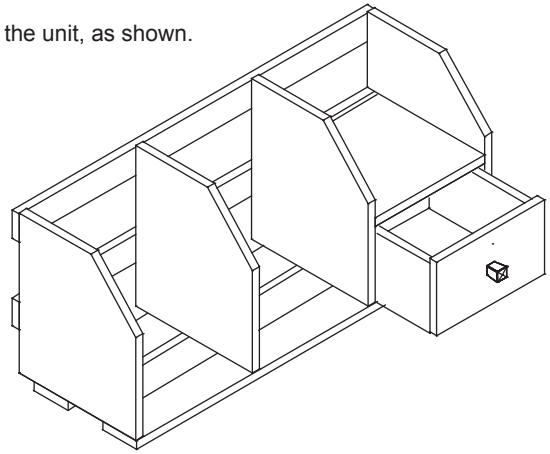

Recommended Maximum Weight

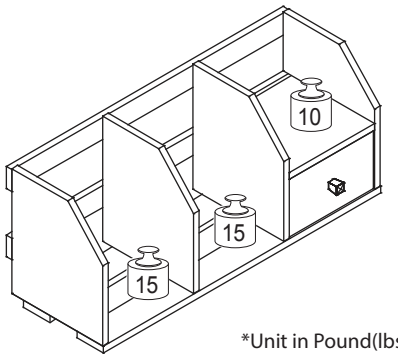

*Unit in Pound(lbs)

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.

>Put heavier items on lower shelves.


Furinno®

Fits Space. Fits Budget

Assembly Instruction

Furinno Pasir Desk Storage Shelf w/Bin

MODEL : **12247**

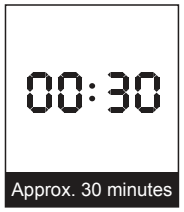


Approx. 30 minutes



Recomm. 1 Person



Tools Required

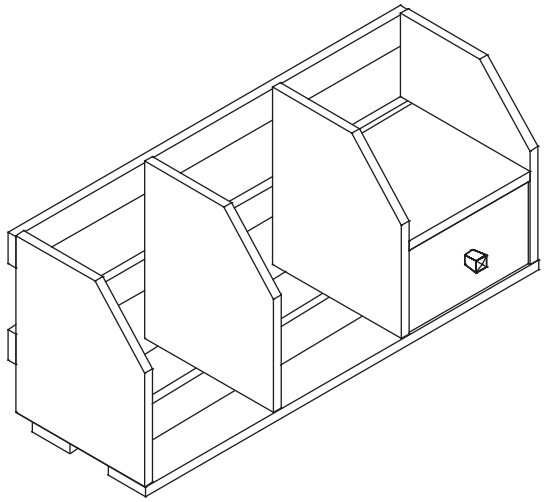

Customer Support


NEED HELP? For replacement requests or product inquiries, please contact our Customer Service Team by emailing us at **support@furinno.com**. Thank you for selecting Furinno!

www.furinno.com

1224720190104

No	Hardware List	Qty
1	Self-Tapping Screw	20pcs
2	Dowel	6pcs
3	Cam-Lock Screw	2pcs
4	Cam-Lock Nut	2pcs
5	Handle	1pc
6	Screws	1pc

No	Parts List	Qty
A	Left Panel	2pcs
B	Center Panel	1pc
C	Right Panel	1pc
D	Bottom Panel	1pc
E	Bar Panel	4pcs
F	Door Panel	1pc
G	Drawer Left Panel	1pc
H	Drawer Right Panel	1pc
I	Drawer Back Panel	1pc
J	Drawer Bottom Panel	1pc

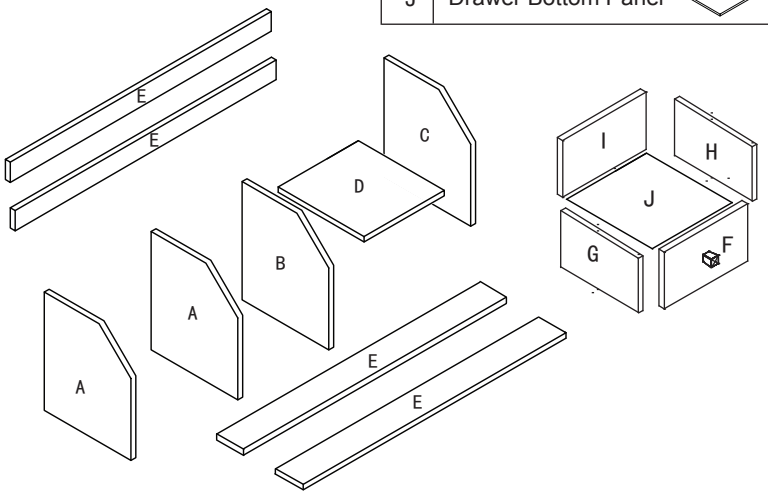


USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using uncompatible hardware might cause damage to product.


STEP 1

1.1 Connect Panel (G,H&I) using Self Tapping Screw (1), as shown.
1.2 Slide Panel (J) into the unit.
1.3 Install Handle (5) on Panel (F) using Screw (6).
1.4 Attach Panel (F) to assembled unit using Dowel (2) & Cam-Lock Screw/Nut (3&4).

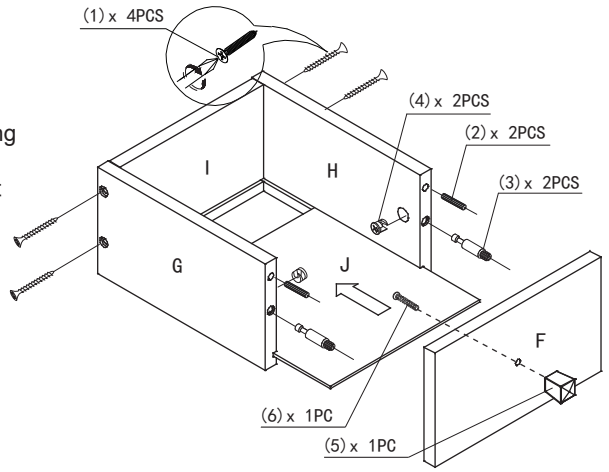

STEP 2

Attach Panel (B, C, D) using Dowel (2), as shown.

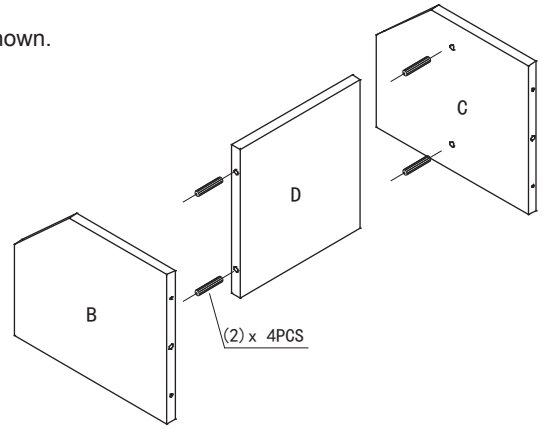

STEP 3

Connect two Panel (E) to the two Panel (A) and the assembled unit in Step 2 using Self Tapping Screw (1).

