

STEP 4

Attach Panel (B) to assembled unit and tighten it with Screw (6) using screwdriver.

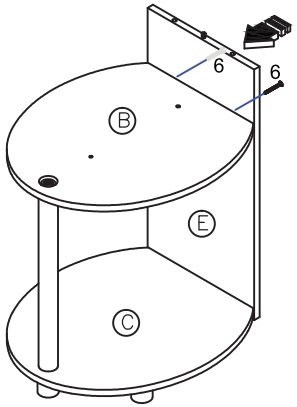


STEP 5

Attach Top Cap (3) to Panel (B) and tighten it with Long Round Pole (2).

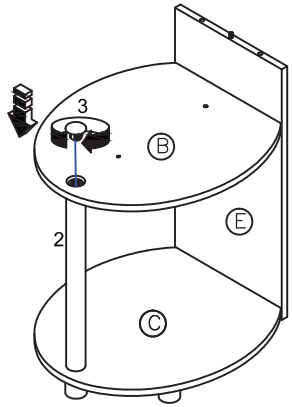


STEP 6

Attach Panel (D) to Panel (B) with Dowel (7) and Screw (6), as shown.

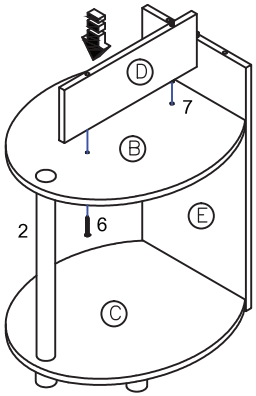


STEP 7

Attach Panel (A) to assembled unit with Mini Fix Bolt/ Cam (1A&1B). Lock Mini Fix Cam (1B) using screwdriver.

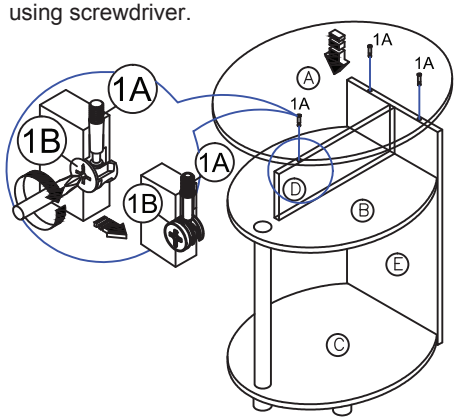

Recommended Maximum Weight

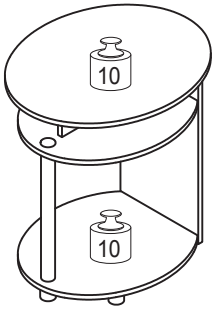

*Unit in Pound(lbs)

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.


>Put heavier items on lower shelves.

Furinno®
Fits Space. Fits Budget

Assembly Instruction

Furinno JAYA Simple Design
Oval End Table

MODEL : **15080**

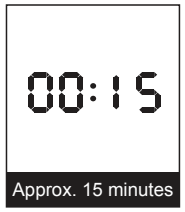


Approx. 15 minutes



Recomm. 1 Person



Tool Required

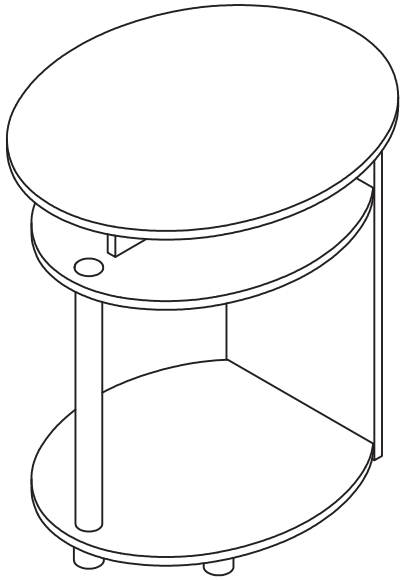

Customer Support


NEED HELP? For replacement requests or product inquiries, please contact our Customer Service Team by emailing us at **support@furinno.com**. Thank you for selecting Furinno!

www.furinno.com

1508020181017

No	Hardware List	Qty
1	Mini Fix Bolt& Cam 1A 1B	3pcs
2	Long Round Pole	1pc
3	Top Cap	1pc
4	Round Leg	1pc
5	Plug Round Leg	2pcs
6	C/B Screw	5pcs
7	Dowel	5pcs

No	Parts List	Qty
A	Top Panel	1pc
B	Shelf Panel	1pc
C	Bottom Panel	1pc
D	Center Panel	1pc
E	Back Panel	1pc

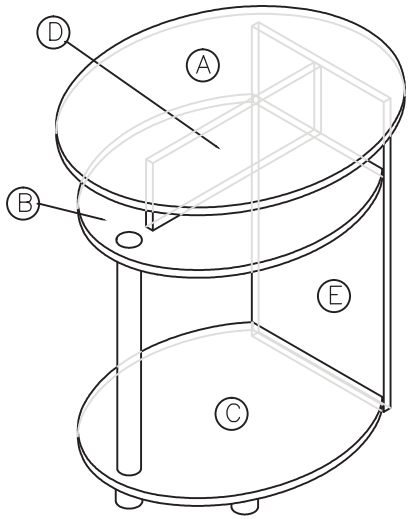


USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using uncompatible hardware might cause damage to product.


STEP 1

1.1 Screw Mini Fix Bolt (1A) into pre-drill hole on Panel (A) as shown.
1.2 Insert Mini Fix Cam (1B) to Panel (D&E) as shown.
1.3 Insert Dowel (7) to Panel (B)(C)(D)&(E) as shown.
1.4 Attach Plug Round Leg (5) into pre-drill hole on Panel (C).

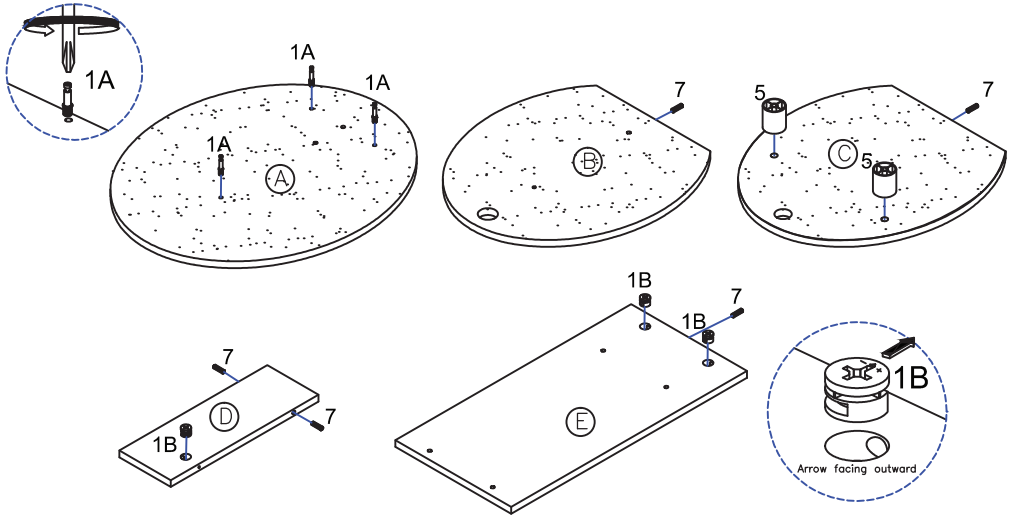

STEP 2

Attach Long Round Pole (2) to Panel (C) and tighten it with Round Leg (4) as shown.

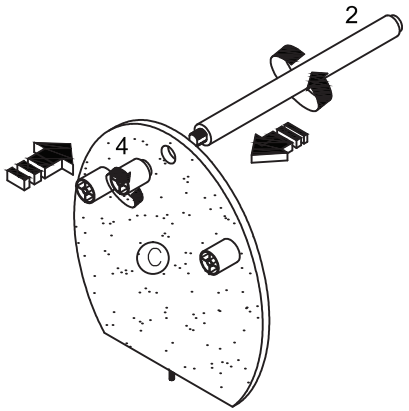

STEP 3

Attach Panel (E) to Panel (C) and tighten it with Screw (6) using screwdriver.

