

**STEP 5**

Unfold the Bin (5) and slide in the table.

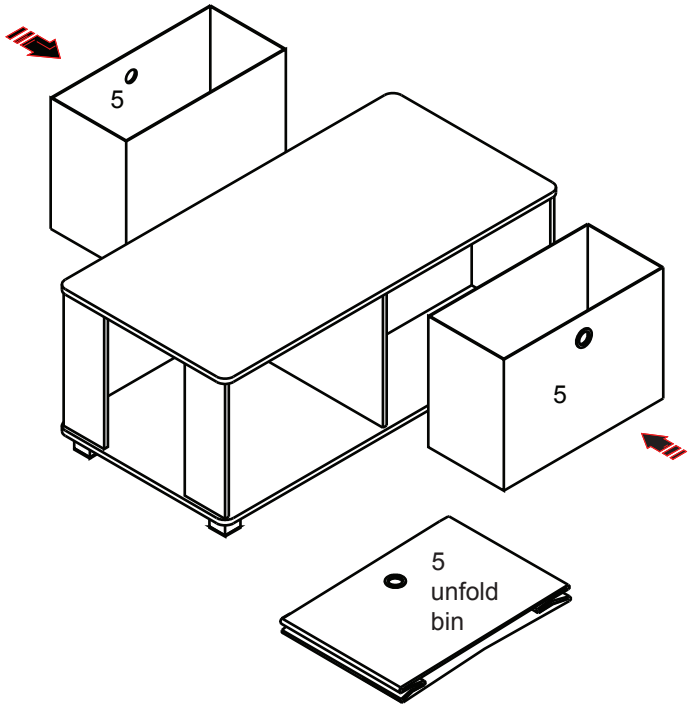


## Recommended Maximum Weight

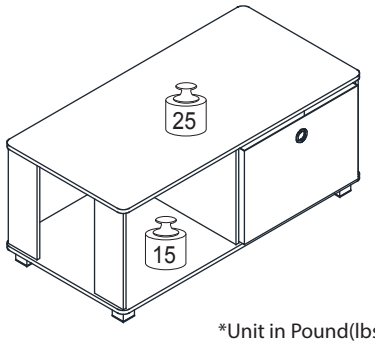


*Unit in Pound(lbs)

***WARNING:***

*>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.*

*>DO NOT allow children to climb on unit.*

*>Put heavier items on lower shelves.*

Furinno®

Fits Space. Fits Budget

# *Assembly Instruction*

Furinno Coffee Table with Bin Drawer

MODEL : **99954**


DIMENSION : 31.5”(W) x 13.75”(H) x 15.75”(D)





Approx. 30 minutes



Recomm. 1 Person



Tool Required

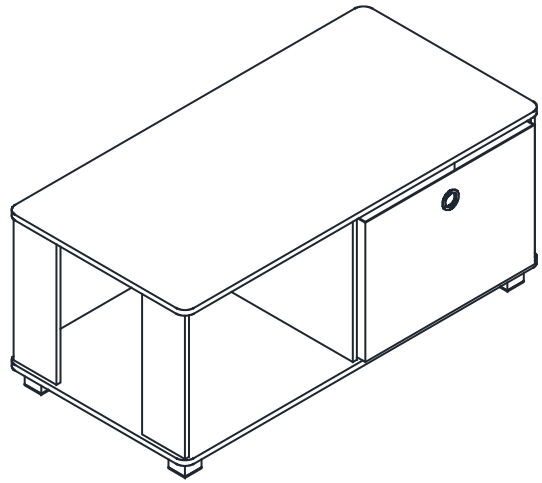

## *Customer Support*


**NEED HELP?** For help with assembly, or if you are missing a part, please call Furinno Customer Service, 1-773-299-8111 from Mon-Fri, 9am-5pm (CST) or email: support@furinno.com

***www.furinno.com***

9995420170308

| No | Hardware List | Qty |
|---|---|---|
| 1 | C/B Screw A | 8pcs |
| 2 | C/B Screw B | 15pcs |
| 3 | Square Leg | 5pcs |
| 4 | Dowel | 12pcs |
| 5 | Non Wooven Bin | 2pcs |
| 6 | White Glue | 1pc |

| No | Parts List | Qty |
|---|---|---|
| a | Top Panel | 1pc |
| b | Bottom Panel | 1pc |
| c | Side Panel | 2pcs |
| d | Side Panel (Small) | 2pcs |
| e | Center Panel | 1pc |

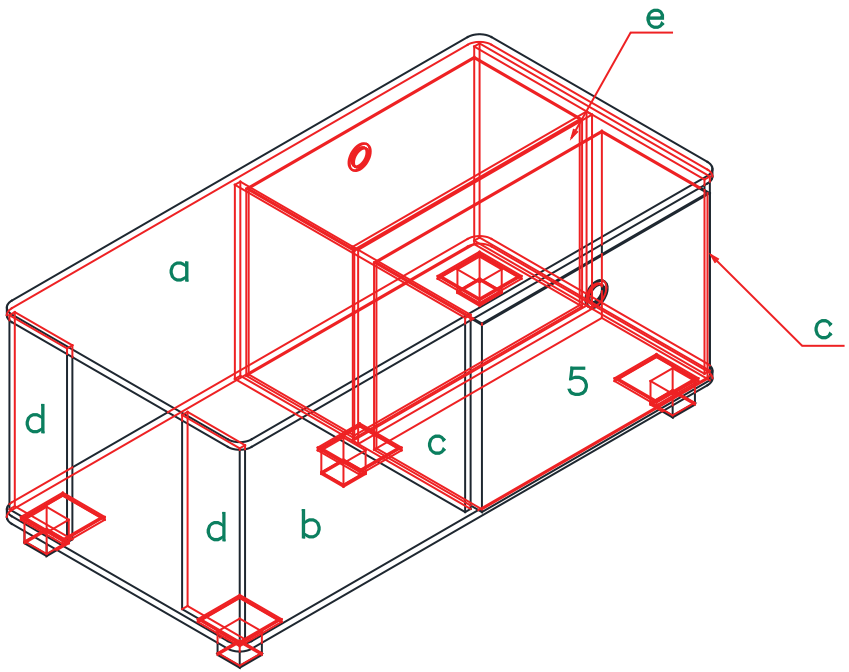



**USEFUL HINTS BEFORE YOU START:**

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using uncompatible hardware might cause damage to product.

**STEP 1**


Insert Dowel (4) to Side Panel (C) (D) and Center Panel (E) with Glue (6).

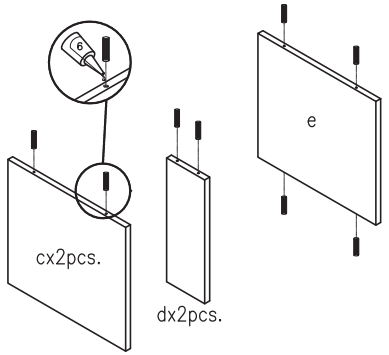


④ DOWEL – 12pcs


**STEP 2**

Attach Side Panel (C) (D) and Center Panel (E) to unfinished surface of Top Panel (A) with Glue (6).

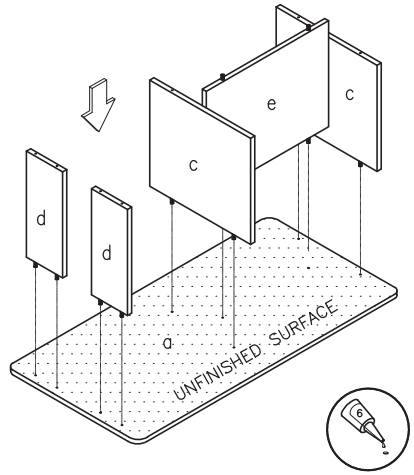


**STEP 3**


Attach Square Leg (3) to the unfinished surface of Bottom Panel (B) with Screw (2).
*Follow the marking on the panel.

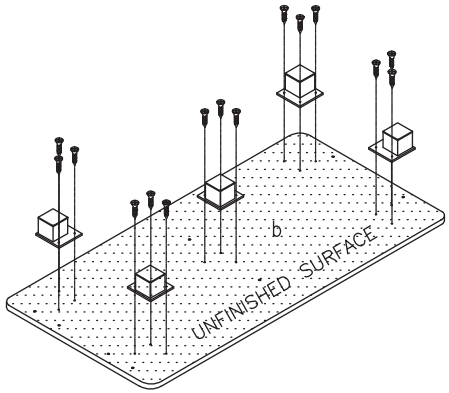


② SCREW B – 15pcs
③ SQUARE LEG – 5pcs

**STEP 4**

Attach Bottom Panel (B) to assembled unit with Screw (1). Using Glue (6) to attach with Dowel on Center Panel (E).

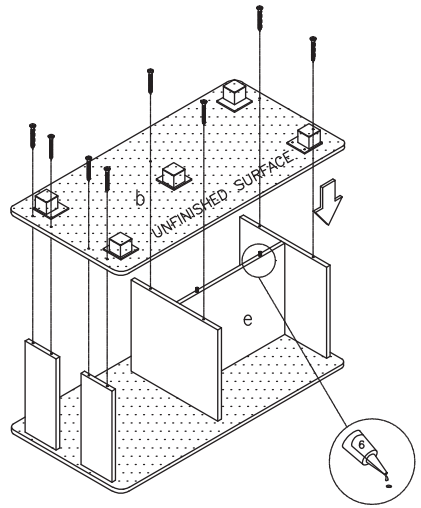


① SCREW A – 8pcs