

STEP 5


5.1 Attach Door Panel (G),(F) with L/R Turn Plate (5),(6) using Screw (1).
5.2 Attach Door Panel (E) to the completed unit in Step 5.1.
Repeat Step 5 to another 2 drawers.

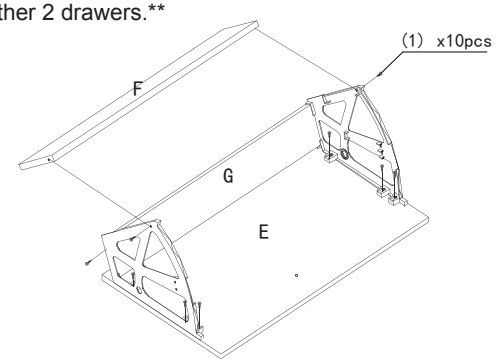

STEP 6


6.1 Attach Door Panel to cabinet using Plastic Nut/Screw (8).
6.2 Attach Handle (7) to Door Panel (E) using Screw (7).
6.3 Attach Shelf Panel (F) to the center of Door Panel using Screw (1).

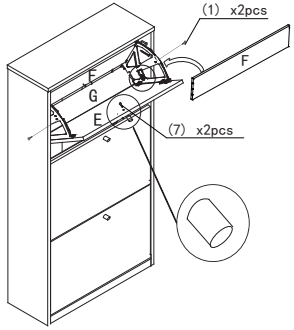

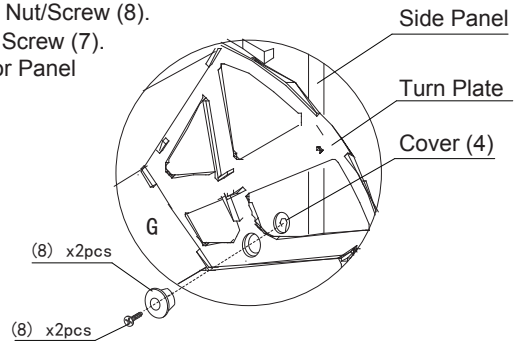

Note: Attach Nut (8) to Cover (4) through hole and tighten with Screw (8).

Recommended Maximum Weight

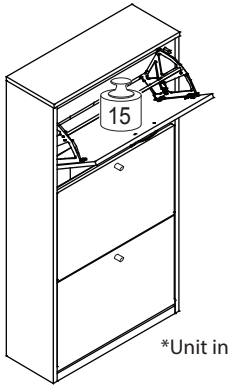

*Unit in Pound(lbs)

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.


>Put heavier items on lower shelves.

Furinno®
Fits Space. Fits Budget

Assembly Instruction

Furinno B&W 3-Door Shoe Storage Cabinet

MODEL : **FNAJ-11042**

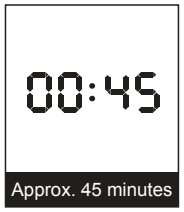


Approx. 45 minutes



Recomm. 2 Person



Tools Required

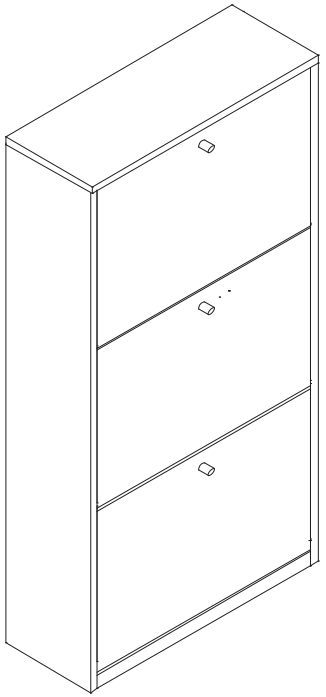

Customer Support


NEED HELP? For replacement requests or product inquiries, please contact our Customer Service Team by emailing us at **support@furinno.com**. Thank you for selecting Furinno!

www.furinno.com

FNAJ1104220180612

No	Hardware List	Qty
1	Screw	32pcs
2	Dowel	10pcs
3	Cam-Lock Screw/Nut	12pcs
4	Cover	6pcs
5	Left Turn Plate	3pcs
6	Right Turn Plate	3pcs
7	Handle/Screw	3pcs
8	Nut/Screw	6pcs
9	Stopper	6pcs
10	Ventilation Cover	3pcs
11	L-Support/Screw	4pcs

No	Parts List	Qty
A	Right Side Panel	1pc
B	Left Side Panel	1pc
C	Top Panel	1pc
D	Bottom Panel	1pc
E	Door Panel	3pcs
F	Door Shelf Panel	6pcs
G	Door Bottom Panel	3pcs
H	Front Panel	1pc
I	Back Panel	2pcs
J	Back Cover Panel	3pcs

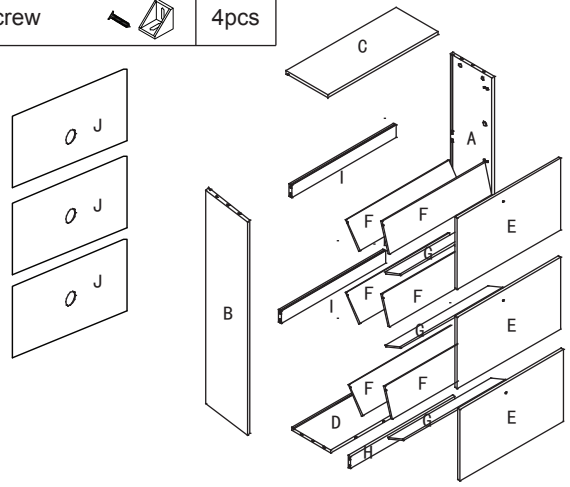


USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using uncompatible hardware might cause damage to product.


STEP 1

1.1 Attach Panel (H) and (D) using Dowel (2).
1.2 Insert Cover (4) and Stopper (9) to L/R Side Panel (A)&(B), as shown.

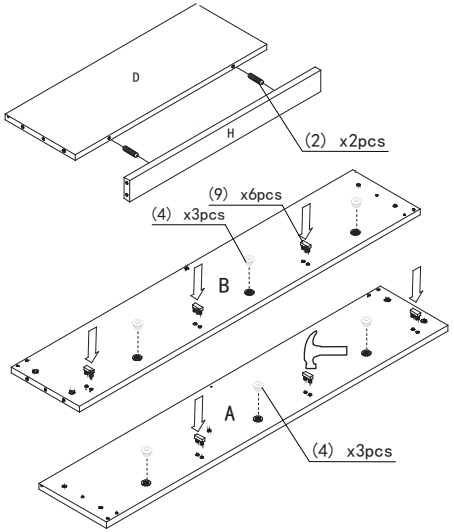


STEP 2

Attach Panel (A),(B),(D),(H),(I) and (J) using Dowel (2) and Cam-Lock Screw/Nut (3).

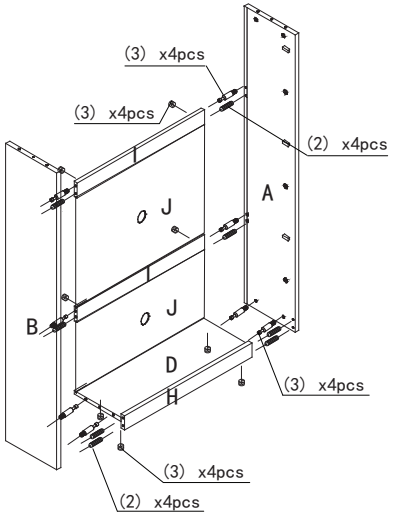

STEP 3

3.1 Slide Upper Back Panel (J) into L/R Side Panel (A) & (B).
3.2 Attach Top Panel (C) to L/R Side Panel (A),(B) using Cam-Lock Screw/Nut (3).
3.3 Insert Ventilation Cover (10) to Upper Back Panel (J).

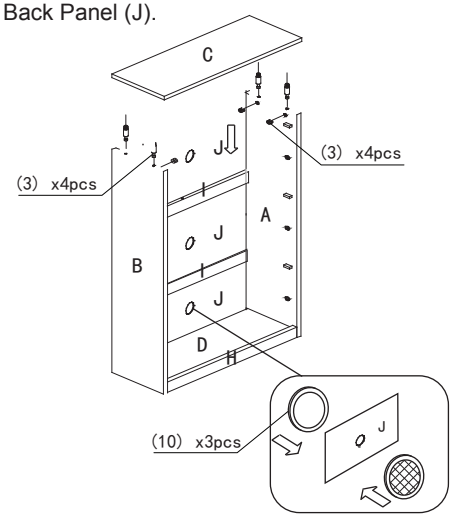

STEP 4

Attach L-Support/Screw (11) to the unit.

