

STEP 4


4.1 Attach Door Panel (H),(G) with L/R Turn Plate (4)&(5) using Screw (1).
4.2 Attach Door Panel (F) to the completed unit in Step 4.1.
** Repeat Step 4 to another door.**

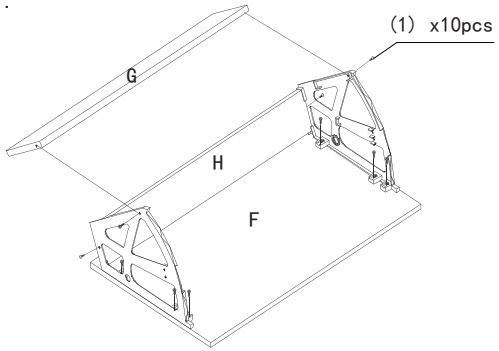

STEP 5


5.1 Attach Door Panel to cabinet using Nut/Screw(6).
5.2 Attach Shelf Panel (G) to the center of Door Panel using Screw (1).
** Repeat Step 5 to another door.**

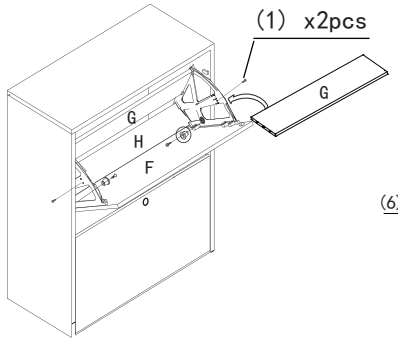

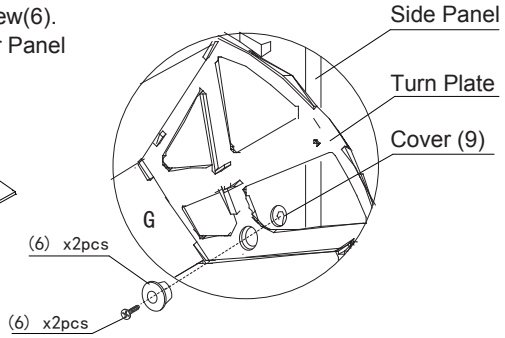

Note: Attach Nut (6) to Cover (9) through hole and tighten with Screw (6).

Recommended Maximum Weight

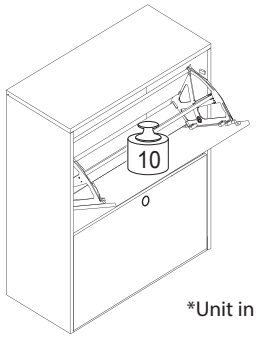

*Unit in Pound(lbs)

WARNING:

>This unit has been designed to support the maximum loads shown. Exceeding these load limits could cause sagging, instability, product collapse, and/or serious injury.

>DO NOT allow children to climb on unit.


>Put heavier items on lower shelves.

Furinno®
Fits Space. Fits Budget

Assembly Instruction

Furinno Rubik 2-Door Shoe Storage Cabinet

MODEL : **FNAJ-11047**

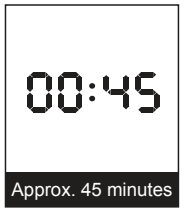


Approx. 45 minutes



Recomm. 2 Person



Tool Required

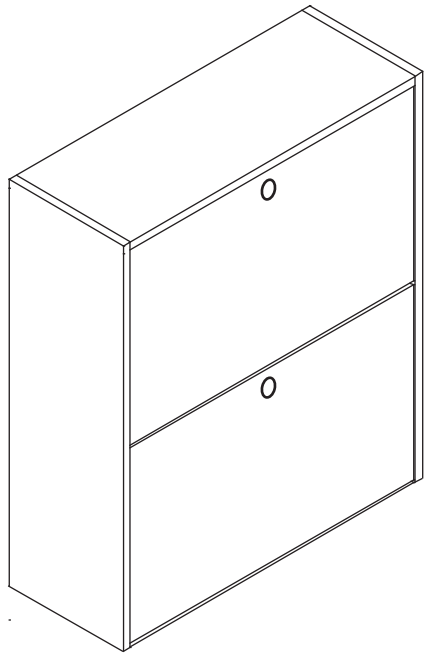


Customer Support

NEED HELP? For replacement requests or product inquiries, please contact our Customer Service Team by emailing us at **support@furinno.com**. Thank you for selecting Furinno!

www.furinno.com

No	Hardware List	Qty
1	Screw	24pcs
2	Long Screw	10pcs
3	Dowel	10pcs
4	Left Turn Plate	2pcs
5	Right Turn Plate	2pcs
6	Nut/Screw	4pcs
7	Stopper	4pcs
8	L-Support/Screw	4pcs
9	Cover	4pcs
10	Sticker	10pcs

No	Parts List	Qty
A	Left Side Panel	1pc
B	Right Side Panel	1pc
C	Top Panel	1pc
D	Front Lower Panel	1pc
E	Back Lower Panel	1pc
F	Door Panel	2pcs
G	Door Shelf Panel	4pcs
H	Door Bottom Panel	2pcs
I	Back Panel	1pc
J	Back Cover Panel	2pcs

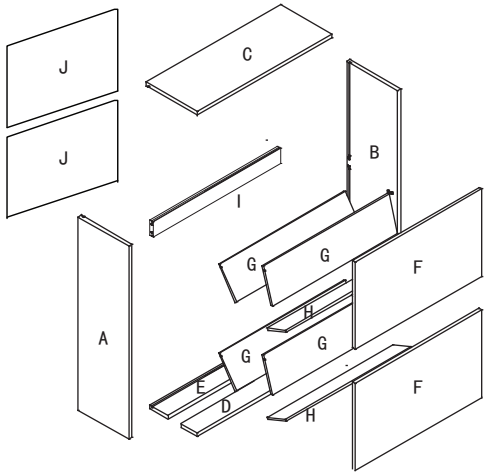


USEFUL HINTS BEFORE YOU START:

1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using uncompatible hardware might cause damage to product.


STEP 1

Insert Cover (9) and Stopper (7) to L/R Side Panel (A)&(B), as shown.

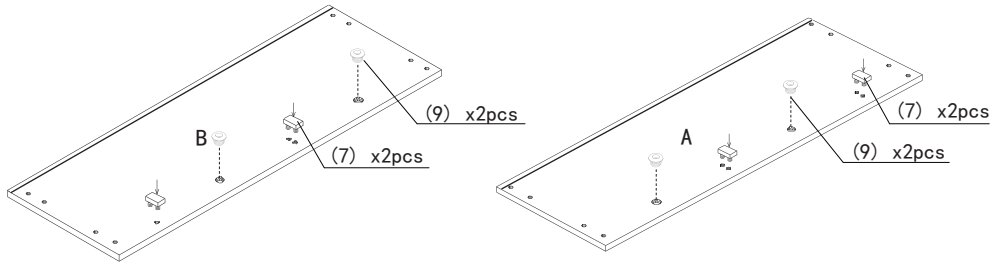

STEP 2

2.1 Attach Panel (A),(C),(D),(E) and (I) with Long Screw (2) and Dowel (3).
2.2 Attach Panel (J) and (B) with completed unit in Step 2.1 using Long Screw (2) and Dowel (3).

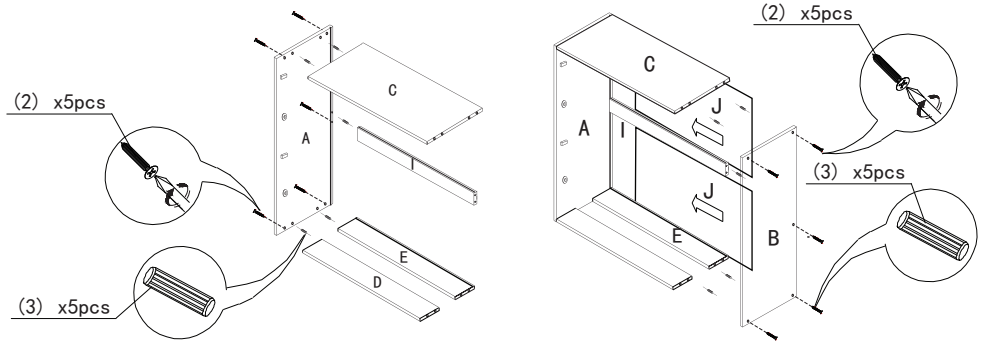

STEP 3

Attach L-Support/Screw (8) on Back Cover Panel (J) and cover Sticker (10) on Long Screw (2).

