

STEP 3

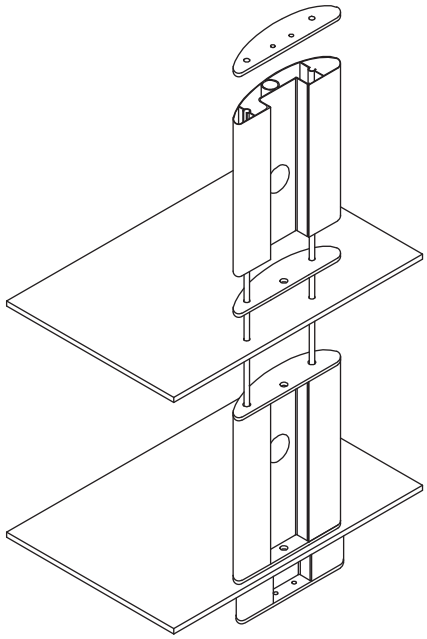



STEP 4

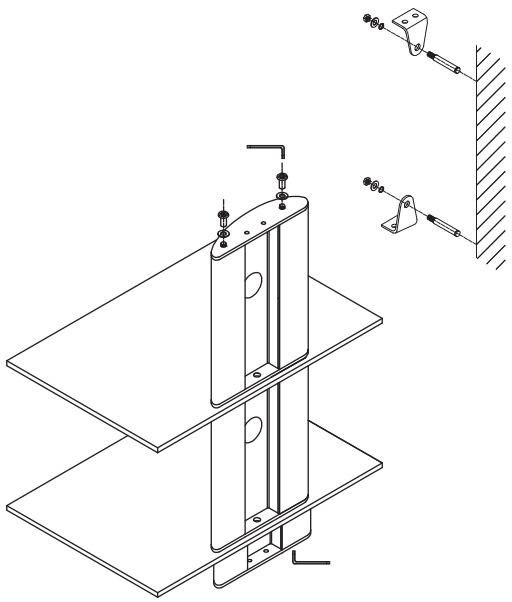


A	Glass	x1	D	Plastic Spacer	x1	G	Metal Plate	x2	3	Nut#2	x2
B	Tube#1	x1	E	Metal Spacer	x1	1	Nut& Spacer	x2	4	Allen Key	x2

STEP 5

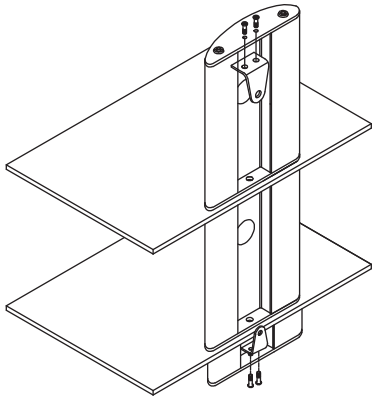

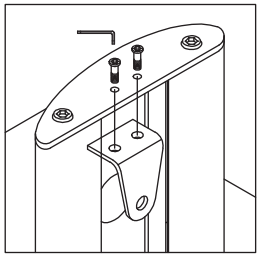

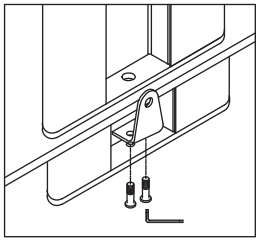

2	Nut#1	x4


Furinno®

Fits Space. Fits Budget

Assembly Instruction

Furinno TV Wall Glass Shelves


MODEL : **FRL001**

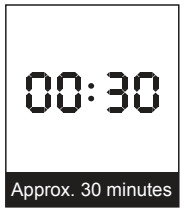


Approx. 30 minutes



Recomm. 1 Person

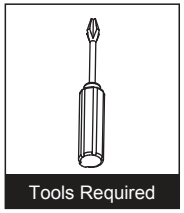

Tools Required

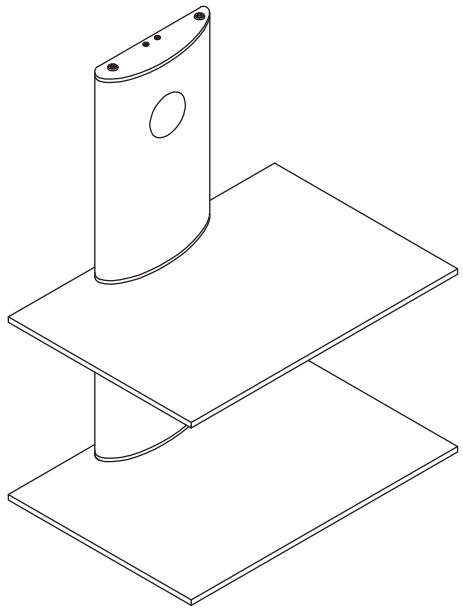

Customer Support


NEED HELP? For replacement requests or product inquiries, please contact our Customer Service Team by emailing us at **support@furinno.com**. Thank you for selecting Furinno!

www.furinno.com

FRL00120181126

No	Hardware List	Qty
1	Nut&Spacer	4pcs
2	Nut#1	4pcs
3	Nut#2	2pcs
4	Allen Key	2pcs


No	Parts List	Qty
A	Glass	2pcs
B	Tube#1	2pcs
C	Tube#2	1pc
D	Plastic Spacer	4pcs
E	Metal Spacer	2pcs
F	Bolt	2pcs
G	Metal Plate	2pcs

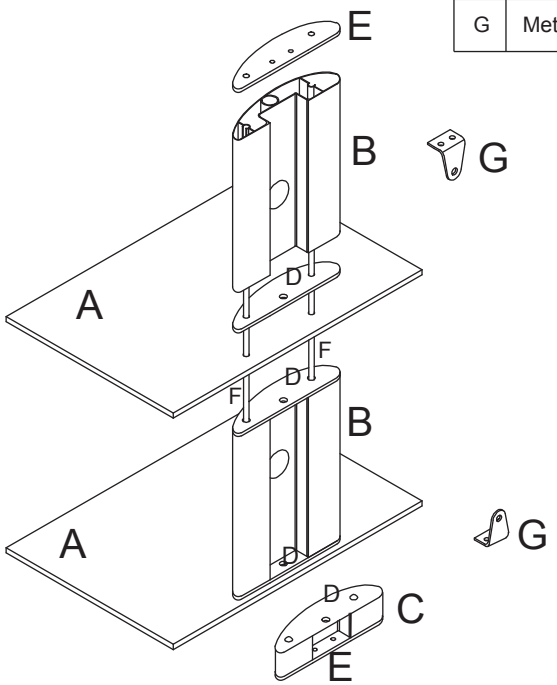

USEFUL HINTS BEFORE YOU START:


1. Read each step carefully before starting.
2. It is important that each step is performed in correct order to avoid difficulties.
3. Identify, sort and count the parts before assembly.
4. Assemble your furniture on packaging cardboard to prevent scratch or damage.
5. Clean the product with mild cleanser using soft damped cloth. Do not use harsh or abrasive cleanser.
6. Using uncompatible hardware might cause damage to product.

STEP 1

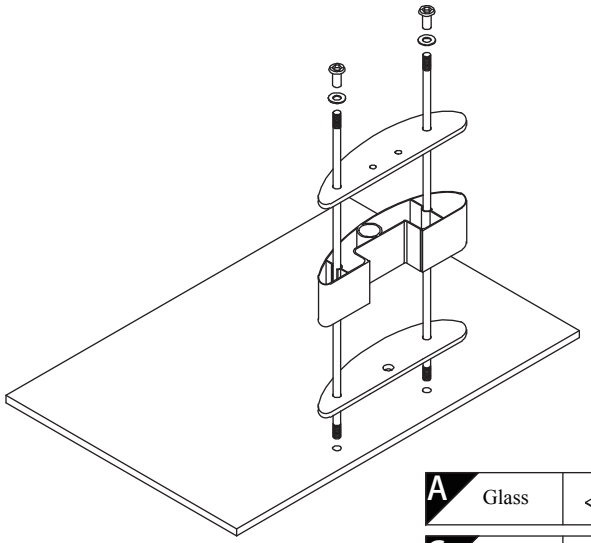

A Glass x1		D Plastic Spacer x1	
C Tube#2 x1		E Metal Spacer x1	
1 Nut& Spacer x2		F Bolt x2	

STEP 2

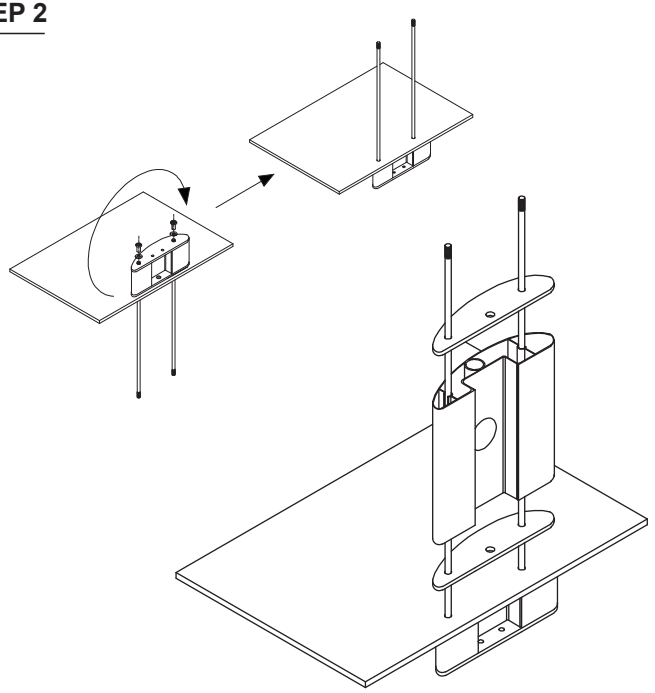

B Tube#1 x1	
D Plastic Spacer x2	